

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
□ / MENU
CANCEL
1 / RDS DISPLAY
2
3 / TA
4 / PTY-
5 / PTY SEARCH
6 / PTY+
7/8/9/0
SD / HD
EZ. VIEW / NT/PAL
ZOOM
SOUND EDIT
SUB TITLE
VOLUME -/+
TUNING/CH. -/+
DOWN / UP
LEFT / RIGHT
ENTER
↻ / RETURN
SLEEP
TV/VIDEO / DIMMER
INFO

TUNER MEMORY
LOGO
OPEN / CLOSE
PAUSE
STOP
SKIP PREV.
PLAY
SKIP NEXT
AUDIO
AUX
DVD
TUNER
SUPER 5.1 / V.H/P
EX. SURROUND ASC
EX. SURROUND MOVIE
EX. SURROUND MUSIC
TEST TONE
SELECT / HDMI AUDIO
REPEAT
STEP
DOLBY PL. II EFFECT
DOLBY PL. II MODE
SLOW / MO./ST.
REMAIN

POWER, MUTE, MENU, CANCEL, EXIT, 1 / RDS DISPLAY, 3 / TA, 4 / PTY-, 5 / PTY SEARCH, / PTY+, 7/8/9/, 07/8/9/, OSD / HD, EZ VIEW / NT/PAL, ZOOM, SOUND EDIT, SUB TITLE, VOLUME, VOL, TUNING/CH, ABAJO / ARRIBA, IZQUIERDA / DERECHA, ENTER, / RETURN, BACK, SLEEP, TV/VIDEO / DIMMER, TV/DTV, INFO, TUNER MEMORY, EPG, LOGO, FAV, OPEN / CLOSE, PAUSE, STOP, SKIP PREV, VERDE, PLAY, AMARILLO, SKIP NEXT, AZUL, AUDIO, AUX, DVD, TUNER, SARRIBAER 51 / VH/P, EX SURROUND ASC, EX SURROUND MOVIE, EX SURROUND MUSIC, TEST, TONE, SELECT / HDMI AUDIO, REPEAT, STEP, DOLBY PL II EFFECT, DOLBY PL II MODE, SLOW / MO./ST, REMAIN, .