

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER ON
MUTE
MENU
RESTORER
1/2/3/4/5
6/7/8/9/0
SOURCE SELECT
MULTEQ.
MONITOR SELECT
A-DSX
SETUP
DYN. EQ.
VOL -/+
iPod SKIP PREV./NEXT
DOWN / UP
LEFT / RIGHT
ENTER
RETURN
SLEEP
CH. LEVEL
SEARCH
PARTY
PURE
iPod PAUSE
iPod STOP

iPod REW
iPod PLAY
iPod FWD
POWER OFF
BD
CD
DOCK
DVD
DVR
GAME
iPod
NET / USB
PHONO
SAT / CBL
SAT TU
TUNER / DTU
TV
V. AUX
CH -/+
QUICK SELECT 1 (BD)
Q. SEL. 2 (SAT/CBL)
QUICK SEL. 3 (DOCK)
D. / ST.
SIMULATION
STANDARD

POWER ON, POWER, MUTE, MENU, RESTORER, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE SELECT, MULTEQ, MONITOR SELECT, DSX, SETARRIBA, DYN EQ, VOL, iPod, SKIP PREV/NEXT, ABAJO, / ARRIBA, IZQUIERDA / DERECHA, ENTER, RETURN, BACK, SLEEP, CH LEVEL, TV/DTV, SEARCH, INFO, PARTY, EPG, PURE, FAV, iPod PAUSE, iPod STOP, iPod REW, VERDE, iPod PLAY, AMARILLO, iPod FWD, AZUL, POWER OFF, DOCK, DVD, DVR, GAME, iPod, NET / USB, PHONO, SAT / CBL, 0SAT TU, TUNER / DTU, V AUX, QUICK SELECT 1 BD, SEL 2 SAT/CBL, QUICK SEL, 3 DOCK, D / ST, ROJO, SIMULATION, STANDARD, .