

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



DVD POWER
AUDIO
TOP MENU / DIR. NAV.
CANCEL / *
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
SHOWVIEW
FUNCTIONS
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT / STEP BACK
RIGHT / STEP FWD
ENTER
RETURN
/ TIMER
DIRECT TV REC.
INFO
PROG. / CHECK
REC. MODE
PAUSE
STOP
REC

SLOW/SEARCH REW
PLAY / x1.3
SLOW/SEARCH FWD
SUB. MENU
ERASE
DRIVE SELECT – DVD
DRIVE SELECT – HDD
CH-
CH+
MANUAL SKIP
TIME SLIP
STATUS
A / EXT. LINK
B / DUBBING
C / CREATE CHAPTER

DVD POWER, POWER, AUDIO, MUTE, TOP MENU / DIR NAV, MENU, CANCEL /, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, / AV, SHOWVIEW, FUNCTIONS, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA / STEP BACK, IZQUIERDA, DERECHA / STEP FWD, DERECHA, ENTER, RETURN, BACK, / TIMER, SLEEP, DIRECT, TV REC, TV/DTV, INFO, PROG / CHECK, EPG, REC MODE, FAV, PAUSE, STOP, REC, ROJO, SLOW/SEARCH REW, VERDE, PLAY / x13, AMARILLO, SLOW/SEARCH FWD, AZUL, SUB MENU, ERASE, DRIVE SELECT, DVD, HDD, CH+, MANUAL SKIP, TIME SLIP, STATUS, A / EXT LINK, B / DUBBING, C / CREATE CHAPTER, .