

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
1/2/3/4/5
6/7/8/9/0
INPUT NEXT
DOLBY / DTS
ON SCREEN
STEREO
ANGLE
SUBTITLE
VOLUME+
VOLUME-
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
STATUS
TEST
MATRIX 6.1

PAUSE
STOP
REW
PLAY
FWD
AUDIO
SET MENU
AMP.
DVD / CD
TUNER
VCR
VIDEO
SURR.-
SURR.+
CH -/+
CENTER-
CENTER+
SW.-
SW.+
SELECT
NIGHT
CINEMA DSP - MOVIE
CINEMA DSP - MUSIC
CINEMA DSP - SPORTS
CINEMA DSP - GAME

POWER, MUTE, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT NEXT, DOLBY / DTS, ON SCREEN, STEREO, ANGLE, SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, STATUS, INFO, TEST, EPG, MATRIX 61, FAV, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, SET MENU, AMP, DVD / CD, TUNER, VCR, VIDEO, SURR, SURR+, VOL+, CENTER, CENTER+, SW+, SELECT, NIGHT, CINEMA DSP, MOVIE, ROJO, MUSIC, SPORTS, CINEMA, DSP, GAME, .