

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
DECODER
LIVE
ADD CLEAR
SETUP
SUBTITLE
VOL+
VOL-
CH+
CH-
UP
DOWN
LEFT
RIGHT
OK
REPEAT
TIMER
INPUT DV CARD
INFO

DISC OPERATION
DUBBING
OPEN/CLOSE
PAUSE
STOP
REC
REW
PLAY
FWD
AUDIO
INPUT DVD
INPUT HDD
IS PS
P-N
REPEAT A-B
GOTO
SLOW
SKIP NEXT/PREV CHAP
TIMESHIFT
TITLE
ANGLE
TS SAVE
EDIT
ZOOM

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, SOURCE, DECODER, LIVE, ADD, CLEAR, SETARRIBA, SUBTITLE, VOL+, VOL-, CH+, ABAJO, IZQUIERDA, DERECHA, REPEAT, BACK, TIMER, SLEEP, INPUT DV CARD, TV/DTV, INFO, DISC OPERATION, EPG, DUBBING, FAV, OPEN, /CLOSE, PAUSE, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, INPUT DVD, INPUT HDD, IS PS, REPEAT A, GOTO, SLOW, SKIP NEXT/PREV CHAP, P+/P-, TIMESHIFT, TITLE, ANGLE, TS SAVE, EDIT, ZOOM, .