

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



| |
|---------------|
| ON / SOURCE |
| MUTING |
| SETUP |
| 1 / PHONO |
| 2 / CD |
| 3 / TUNER |
| 4 / DVD/VDP |
| 5 / TV/DBS |
| 6 / VCR-1 |
| 7 / VCR-2 |
| 8 / V.AUX |
| 9 / CDR/TAPE |
| INPUT EXT-IN |
| INPUT ANALOG |
| INPUT MODE |
| BAND |
| SHIFT |
| MODE |
| TEST TONE |
| + |
| - |
| CHANNEL+ |
| CHANNEL - |
| VIDEO SELECT |
| SURROUND BACK |

| |
|------------------|
| 5CH./6CH. STEREO |
| STATUS |
| DSP SIMULATION |
| STEREO |
| MAIN – ON |
| MAIN – OFF |
| DOLBY/DTS SURR. |
| CINEMA |
| MUSIC |
| OFF |
| DIRECT |
| DIMMER |
| VIRTUAL SURROUND |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |

ON / SOURCE, POWER, MUTING, MUTE, SETARRIBA, MENU, 1 / PHONO, 2 / CD, 3 / TUNER, 4 / DVD/VDP, 5 / TV/DBS, 6 / VCR, 7 / VCR, 8 / VAUX, 9 / CDR/TAPE, INPUT, EXT, 0INPUT ANALOG, / SOURCE, INPUT MODE, BAND, SHIFT, MODE, TEST TONE, VOL+, VOL, CHANNEL+, CHANNEL, VIDEO SELECT, SURROUND BACK, BACK, 5CH/6CH, STEREO, TV/DTV, STATUS, INFO, DSP SIMULATION, EPG, FAV, MAIN, / NET TV, OFF, / SMART, DOLBY/DTS SURR, ROJO, CINEMA, VERDE, MUSIC, AMARILLO, DIRECT, DIMMER, VIRTUAL SURROUND, .