

## **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.  
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.  
Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
FOCUS / A-B
[?] / MTS
[S] / SLEEP
PIP / REP.
TEXT
PRG. +
PRG. -
[I] / TIME
DVD
INFO
CTRL.
SOUND
PICTURE
STILL / SUBT.
RED / DELETE
GREEN / SKIP
YELLOW / INSERT
BLUE / REPLACE
SIZE / AUDIO

CVBS 1
CVBS 2
CVBS 3
Y.Pb.Pr.
YC 1
YC 2
PC
DVI
[X] / PREPG.
NORMAL / TITLE
STOP
REC / 2nd
REW / SKIP PREV.
PLAY / PAUSE
FWD / SKIP NEXT

POWER, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, FOCUS / A, / MTS, / SLEEP, PIP / REP, TEXT, PRG+, PRG, / TIME, SLEEP, DVD, TV/DTV, INFO, CTRL, EPG, SOUND, FAV, PICTURE, STILL, / SUBT, ROJO / DELETE, ROJO, VERDE / SKIP, VERDE, AMARILLO / INSERT, AMARILLO, AZUL / REPLACE, AZUL, SIZE / AUDIO, MUTE, CVBS 1, CVBS 2, CVBS 3, YPbPr, YC 1, YC 2, DVI, / PREPG, NORMAL / TITLE, STOP, REC / 2nd, REW / SKIP PREV, PLAY / PAUSE, FWD / SKIP NEXT, .