

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
1/2/3/4/5
6/7/8/9/0
MODE
>10 / -/-- / SHIFT
A.F.D.
BASS BOOST
2 CH.
TEST TONE
MASTER VOLUME+
MASTER VOLUME -
CH/PRESET+
CH/PRESET -
UP
DOWN
LEFT
RIGHT
ENTER/EXECUTE
SLEEP
ANALOG DIRECT
LEVEL CENTER -
LEVEL CENTER+
LEVEL REAR -
LEVEL REAR+

VIDEO 1
VIDEO 2
VIDEO 3
5.1 CH.
AUX
CD
DVD/LD
MD/TAPE
PHONO
TUNER
TV/SAT

POWER, MUTE, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0MODE, / SOURCE, 10 /, / SHIFT, AFD, BASS BOOST, 2 CH, TEST TONE, MASTER, VOLUME+, VOL+, MASTER VOLUME, VOL, CH/, PRESET+, CH/PRESET, ABAJO, IZQUIERDA, DERECHA, ENTER/EXECUTE, SLEEP, ANALOG DIRECT, TV/DTV, LEVEL CENTER, ROJO, LEVEL, CENTER+, VERDE, LEVEL REAR, AMARILLO, REAR+, AZUL, VIDEO 1, VIDEO 2, VIDEO 3, AUX, DVD/LD, MD/TAPE, PHONO, TUNER, 0TV/SAT, SHIFT, .