

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.

	DV
	
MENU	
CLEAR	
1/2/3 / DISC 1/2/3	
4/5 / DISC 4/5	
6/7/8/9/0	
AV EFFECT	
≥10 / -/--	
DISPLAY	
FL DISPLAY	
SET UP	
SUB TITLE	
SKIP NEXT	
SKIP PREV.	
UP / ON	
DOWN / OFF	
LEFT	
RIGHT	
SELECT	
RETURN	
TIMER	
DISC	
TITLE	

DISC MANAGER
MARKER
PAUSE
STOP
SLOW/SEARCH REW
PLAY
SLOW/SEARCH FWD
AUDIO
ANGLE
REPEAT
A-B REPEAT
PLAY MODE
AM
MUTING
VOLUME+
VOLUME-
AUX
TUNER / BAND
DVD / CD
TV
VCR
MIX 2CH.
SIMULATED ST.
TEST

CHANNEL-
CHANNEL+
CH. SELECT
DOLBY PRO LOGIC
SUBWOOFER LEVEL
SFC
SUPER SRND.

DVD, POWER, MENU, CLEAR, EXIT, 1/2/3 / DISC 1/2/3, 1/2/3, 4/5 / DISC 4/5, 4/5, 6/7/8/9/, 06/7/8/9/, 0AV EFFECT, 10 /, DISPLAY, FL DISPLAY, SET ARRIBA, SUB TITLE, SKIP NEXT, SKIP PREV, ARRIBA / ON, ABAJO / OFF, ABAJO, IZQUIERDA, DERECHA, SELECT, RETURN, BACK, TIMER, SLEEP, DISC, TV/DTV, TITLE, INFO, DISC MANAGER, EPG, MARKER, FAV, PAUSE, STOP, SLOW/SEARCH REW, VERDE, PLAY, AMARILLO, SLOW/SEARCH FWD, AZUL, AUDIO, MUTE, ANGLE, REPEAT, B REPEAT, PLAY MODE, AMP, MUTING, VOLUME+, VOL+, VOLUME, VOL, AUX, TUNER / BAND, DVD / CD, VCR, MIX 2CH, SIMULATED ST, TEST, CHANNEL, CHANNEL+, CH SELECT, DOLBY PRO LOGIC, TV/DTV, SUBWOOFER LEVEL, SFC, SARRIBAER SRND, .