

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER RECEIVER
MUTE
HOME / HOME MENU
1/2/3/4/5
6/7/8/9/0
BAND
CH. LEVEL
DISP.
VIDEO PARAMETER
CLASS
T. EDIT
MASTER VOLUME +/-
CH +/-
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
A. ATT.
STATUS
MPX
D. ACCESS
AUTO / ALC. / DIRECT

STEREO
STANDARD
ADV. SURR.
AUDIO PARAMETER
BD
CD
CD-R
DVD
DVR
HDMI
iPod USB
TUNER
TV
VIDEO
MCACC.
PHASE CTRL.
SB. CH.
SIGNAL SEL.
PRESET PREV.
PRESET NEXT
INPUT SELECT ←
INPUT SELECT →
2nd ENTER
DIMMER
PQLS.

POWER, RECEIVER, MUTE, / HOME MENU, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0BAND, / AV, CH LEVEL, DISP, VIDEO PARAMETER, CLASS, T EDIT, MASTER, VOLUME, VOL, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, A ATT, TV/DTV, STATUS, INFO, MPX, EPG, D ACCESS, FAV, AUTO / ALC / DIRECT, ROJO, STEREO, VERDE, STANDARD, AMARILLO, ADV SURR, AZUL, AUDIO PARAMETER, DVD, DVR, HDMI, iPod USB, TUNER, VIDEO, 0MCACC, PHASE CTRL, SB CH, SIGNAL SEL, PRESET PREV, PRESET NEXT, INPUT SELECT, DIMMER, PQLS, .