

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU / [MENU]
EXIT
1/2/3/4/5
6/7/8/9/0
[SOURCE] / TV/VIDEO
-/--
[DISPLAY] / DISPLAY
HOLD / [HOLD]
SUBPAGE / [SUBPAGE]
TTX / MIX
VOL+
VOL -
P+ / NEXT PAGE
P- / PREV PAGE
UP
DOWN
LEFT
RIGHT
PIP / ON
PRE - CH
SLEEP / [SLEEP]
PC
LIST/FLOF / [LIST/FLOF]

AUTO
STILL / [STILL]
RED / P. SIZE
GREEN
YELLOW
BLUE / LOCATE
DUAL I/II / [DUAL I/II]
CANCEL / [CANCEL]
[P. STD] / P. STD
[S. STD] / S. STD
SIZE / [SIZE]

POWER, MUTE, MENU /, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0 / TV/VIDEO, / SOURCE, / DISPLAY, HOLD /, SUBPAGE /, TTX / MIX, VOL+, VOL-, P+ / NEXT PAGE, PREV PAGE, ABAJO, IZQUIERDA, DERECHA, PIP / ON, PRE, BACK, SLEEP /, SLEEP, TV/DTV, LIST/FLOF /, EPG, AUTO, / NET TV, STILL /, ROJO / P SIZE, ROJO, VERDE, AMARILLO, AZUL / LOCATE, AZUL, DUAL I/II /, CANCEL /, / P STD, / S STD, SIZE /, .