

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
CANC
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
AV
LIST
HOME
RESOLUTION
CHAPTER ADD
TXT
SKIP NEXT CHAP
SKIP PREV CHAP
P+ / P-
UP /DOWN/LEFT/RIGHT
OK
REF/FAV
GREEN/ AUDIO
YELLOW/SUBT
BLUE/TIMESHIFT
REPEAT
DUBBING
TV/DVD
INFO

GUIDE
MARKER
OPEN/CLOSE
PAUSE
STOP
REC
REW
PLAY
FWD
INPUT DVD
INPUT HDD
MHP
PIP
PIP CH DOWN
PIP CH UP
SHUFFLE
STEP
TITLE
SEARCH
ZOOM
THUMBNAIL
TXT INDEX
TXT MIX
TXT FREEZE

POWER, CANC, EXIT, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AV, LIST, HOME, RESOLUTION, CHAPTER ADD, TXT, SKIP NEXT CHAP, SKIP PREV CHAP, P+ / P-, ARRIBA/ABAJO/IZQUIERDA/DERECHA, REF/FAV, ROJO, VERDE/ AUDIO, VERDE, AMARILLO/SUBT, AMARILLO, AZUL/TIMESHIFT, AZUL, REPEAT, BACK, DUBBING, SLEEP, TV/DVD, TV/DTV, INFO, GUIDE, EPG, MARKER, FAV, OPEN/CLOSE, PAUSE, STOP, REC, REW, PLAY, FWD, INPUT DVD, INPUT HDD, MHP, PIP, PIP CH, ABAJO, PIP CH ARRIBA, SHUFFLE, STEP, TITLE, SEARCH, ZOOM, THUMBNAIL, TXT INDEX, TXT MIX, TXT FREEZE, .