

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



ON / SOURCE
AUDIO
MENU
CD
DBS
DVD
PHONO
CDR / TAPE
TUNER
TV
V. AUX
VCR-1
VCR-2
VDP
SHIFT
DISPLAY
VIDEO SELECT
SETUP
TEST TONE
- / +
CHANNEL - / +
UP
DOWN
LEFT
RIGHT

ENTER
RETURN
CH. SELECT
DIMMER
MEMORY
SPEAKER
INPUT – EXT. IN
INPUT – MODE
INPUT – ANALOG
OFF
5 CH./6 CH. STEREO
CINEMA
DIRECT
DOLBY/DTS SURR.
DSP SIMULATION
DTS
MUSIC
STEREO
VIRTUAL SURROUND
MODE
ON SCREEN
PRESET PREV.
PRESET NEXT
SURROUND BACK
SURR. PARAMETER

ON / SOURCE, POWER, AUDIO, MUTE, MENU, DBS, DVD, PHONO, CDR / TAPE, TUNER, V AUX, VCR, 0VDP, / AV, SHIFT, DISPLAY, VIDEO SELECT, SETARRIBA, TEST TONE, / +, VOL, CHANNEL, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, CH SELECT, TV/DTV, DIMMER, INFO, MEMORY, EPG, SPEAKER, FAV, INPUT, EXT IN, ROJO, MODE, VERDE, ANALOG, AMARILLO, OFF, 5 CH/6 CH STEREO, CINEMA, DIRECT, DOLBY/DTS SURR, DSP SIMULATION, DTS, MUSIC, STEREO, VIRTUAL SURROUND, ON SCREEN, PRESET PREV, PRESET NEXT, SURROUND BACK, SURR PARAMETER, .