


FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
-/--
DISPLAY
ASPECT
SBPAGE
TEXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER

SLEEP
DTV
INFO

EPG
FAV
AUTO
HOLD
RED
GREEN
YELLOW
CYAN
AUDIO
P. MODE
S. MODE
USB / CR
NICAM / A2
REVEAL
SIZE
SUBTITLE
SKIP NEXT
SKIP PREV
TV / RADIO
INDEX
REC STOP
REC
REW
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, DISPLAY, ASPECT, SBPAGE, TEXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, BACK, SLEEP, DTV, TV/DTV, INFO, EPG, FAV, AUTO, / NET TV, HOLD, / SMART, ROJO, VERDE, AMARILLO, CYAN, AZUL, AUDIO, P MODE, S MODE, USB / CR, SHIFT, NICAM / A2, REVEAL, SIZE, SUBTITLE, SKIP, NEXT, PREV, TV / RADIO, TV/DTV, INDEX, REC STOP, REC, REW, FWD, .