

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY – ON
AUDIO
TOP MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
MENU / LIST
DISPLAY
HDMI
SETUP
TEXT
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER / OK
RETURN / BACK
TIME SHIFT
1.3x/0.8x PLAY
i+
GUIDE
DUBBING

OPEN/CLOSE / EJECT
PAUSE
STOP
REC
REV.
PLAY
FWD
VCR
DVD
SAT. LINK
SUBTITLE
PROG. -
PROG. +
CM SKIP
TIMER SET
TIMER PROG.
REC. SPEED
RED
GREEN
YELLOW / SYSTEM
BLUE / SEARCH

STANDBY, POWER, AUDIO, MUTE, TOP MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, MENU / LIST, DISPLAY, HDMI, SETARRIBA, TEXT, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER /, RETURN / BACK, BACK, TIME SHIFT, SLEEP, 13x/08x PLAY, TV/DTV, INFO, GUIDE, EPG, DUBBING, FAV, OPEN/CLOSE, / EJECT, PAUSE, STOP, REC, ROJO, REV, VERDE, PLAY, AMARILLO, FWD, AZUL, VCR, DVD, SAT LINK, SUBTITLE, PROG, PROG +, SHIFT, + P+, CM SKIP, TIMER SET, TIMER PROG, REC SPEED, AMARILLO / SYSTEM, AZUL / SEARCH, .