

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
□□□ / MENU
CANCEL
1/2/3/4/5
6/7/8/9/0
V-SOUND / V-H/P
SD / HD
SLIDE MODE
ZOOM
EZ. VIEW / NT./PAL
SUBTITLE
VOLUME+
VOLUME-
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER
↻ / RETURN
SLEEP
DIGEST
INFO

TUNER MEMORY
LOGO
EJECT
PAUSE
STOP
REW
PLAY
FWD
AUDIO
AUX
DVD
TUNER
USB
MO. / ST.
TUNING/CH -
TUNING/CH +
HDMI AUDIO / SELECT
REPEAT
STEP
DIMMER
REMAIN

POWER, MUTE, / MENU, MENU, CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, SOUND, / V, H/P, SD / HD, SLIDE, MODE, ZOOM, VIEW / NT/PAL, SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, DIGEST, TV/DTV, INFO, TUNER MEMORY, EPG, LOGO, FAV, EJECT, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, AUX, DVD, TUNER, USB, MO / ST, TUNING/CH, TUNING/CH +, HDMI AUDIO / SELECT, REPEAT, STEP, DIMMER, REMAIN, .