

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTING
DVD MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
FUNCTION+
FUNCTION-
DISPLAY
DYNAMIC BASS
DISPLAY / TOOLS
SUBTITLE / D. TUNING
VOLUME+
VOLUME-
SKIP/PRESET NEXT
SKIP/PRESET PREV.
UP
DOWN
LEFT
RIGHT
RETURN
SLEEP
TV INPUT
DIMMER

ANGLE / MEMORY SEL.
SYSTEM MENU
PAUSE
STOP
REW
PLAY
FWD
AUDIO
DVD TOP MENU
PICTURE NAVI.
S-AIR MODE
SOUND MODE
THEATRE
SLOW/TUNING -
SLOW/TUNING +
-
+
NIGHT
←• / REPLAY / STEP B.
ONE-TOUCH PLAY
•→ / ADVAN. / STEP F.

POWER, MUTING, MUTE, DVD MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FUNCTION+, FUNCTION, DISPLAY, DYNAMIC BASS, DISPLAY / TOOLS, SUBTITLE / D TUNING, VOLUME+, VOL+, VOLUME, VOL, SKIP/PRESET NEXT, SKIP/PRESET PREV, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, SLEEP, TV INPUT, TV/DTV, DIMMER, INFO, ANGLE / MEMORY SEL, EPG, SYSTEM MENU, FAV, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, DVD TOP MENU, PICTURE NAVI, AIR MODE, SOUND MODE, THEATRE, SLOW/TUNING, SLOW/TUNING +, NIGHT, / REPLAY / STEP B, ONE, TOUCH PLAY, / ADVAN / STEP F, .