

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANBY/ON
 / AUDIO
HOME MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
SOURCE
HDMI
 / DISPLAY
CONTINUED
 / REPLAY
 / SUBTITLE
RESOLUTION+
RESOLUTION -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
 / RETURN
SHORT SKIP /
CD/SACD
DIMMER

POPUP MENU
TOP MENU
OPEN/CLOSE
STOP
REW
PLAY/PAUSE
FWD
AUDIO P.
FUNCTION
VIDEO P.
 / REPEAT
A - B
RED / PROGRAM
GREEN / BOOKMARK
YELLOW / ZOOM
BLUE / INDEX

STANDBY/ON, POWER, / AUDIO, MUTE, HOME MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, HDMI, / DISPLAY, CONTINUED, / REPLAY, / SUBTITLE, RESOLUTION+, VOL+, RESOLUTION, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SHORT SKIP /, SLEEP, CD/SACD, TV/DTV, DIMMER, INFO, POPARRIBA MENU, EPG, TOP MENU, FAV, OPEN/CLOSE, / NET TV, STOP, / SMART, REW, VERDE, PLAY/PAUSE, AMARILLO, FWD, AZUL, AUDIO P, FUNCTION, VIDEO P, / REPEAT, ROJO / PROGRAM, ROJO, VERDE / BOOKMARK, AMARILLO / ZOOM, AZUL / INDEX, .