


FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.


MUTE
POP-UP / MENU
1/2/3/4/5
6/7/8/9/0
USB
BAND
DISPLAY
SCENE – BD/DVD
SCENE – NET
SCENE – RADIO
VOLUME+
VOLUME -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
SCENE – TV
INFO
MEMORY

MODE
PAUSE
STOP
REW
PLAY
FWD
AV 1/2/3/4/5/6
HDMI 1/2/3/4/5
V – AUX
AUDIO 1
AUDIO 2
NET
TUNER
TUNING+
TUNING -
PROGRAM DOWN
PROGRAM UP
PRESET PREV
PRESET NEXT
ENT.
ENHANCER
MOVIE
MUSIC
PURE DIRECT
STRAIGHT

SUR. DECODE
US
SKIP NEXT
SKIP PREV
PAUSE
STOP
REW
PLAY
FWD

POWER, MUTE, POP, ARRIBA / MENU, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0USB, / SOURCE, BAND, DISPLAY, SCENE, BD/DVD, NET, RADIO, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, TV/DTV, INFO, MEMORY, EPG, MODE, FAV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AV 1/2/3/4/5/6, 1/2/3/4/5/6, HDMI 1/2/3/4/5, 7/8/9/AV/, AUX, AUDIO 1, AUDIO 2, TUNER, TUNING+, TUNING, PROGRAM, PROGRAM ARRIBA, PRESET, PRESET NEXT, ENT, ENHANCER, MOVIE, MUSIC, TV/DTV, PURE DIRECT, STRAIGHT, SUR DECODE, USB, NEXT, .