

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY / ON
AUDIO / TV MUTE
[] / MENU
∅ / CLEAR
1/2/3/4/5
6/7/8/9/0
SELECT – DVD
SELECT – VCR
IPC
ANYKEY
PIP
SUBTITLE
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
OK
[↻] / RETURN
TIMER REC.
TV / VCR
INFO
PLAY LIST / TITLE ME.
MARKER

OPEN / CLOSE
REC PAUSE
STOP
REC.
REW
PLAY / PAUSE
FWD
INPUT SELECT
PROG./TRK. -
PROG./TRK. +
LEFT / COPY DVD
RIGHT / COPY VCR
TIME SLIP
TITLE LIST / DISC ME.
REC. SPEED
F. ADV. / SKIP
T
TV STANDBY/ON
AUDIO / TV MUTE
1/2/3/4/5
6/7/8/9/0
PROG./TRK. -
PROG./TRK. +
VOL -/+

STANDBY / ON, POWER, AUDIO / TV MUTE, MUTE, / MENU, MENU, / CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SELECT, DVD, SELECT, VCR, IPC, ANYKEY, PIP, SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, / RETURN, BACK, TIMER REC, SLEEP, TV / VCR, TV/DTV, INFO, PLAY LIST / TITLE ME, EPG, MARKER, FAV, OPEN, / CLOSE, REC, PAUSE, STOP, ROJO, REW, VERDE, PLAY / PAUSE, AMARILLO, FWD, AZUL, INPUT SELECT, PROG/TRK, PROG/TRK +, IZQUIERDA / COPY DVD, DERECHA / COPY VCR, TIME SLIP, TITLE LIST / DISC ME, REC SPEED, F ADV / SKIP, TV STANDBY/ON, 0PROG/TRK, VOL, VOL, .