

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.

D\
AUDIO
MENU / LIST
CLEAR
1/2/3/4/5
6/7/8/9/0
REPEAT
DISPLAY
ZOOM
SETUP
TOP MENU
CM SKIP
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER
← / RETURN
T-SET
SYSTEM
DUBBING
TIMER PROG.

REC. SPEED
OPEN / CLOSE
PAUSE
STOP
REC. / OTR.
REW
PLAY
FWD
V\
STANDBY - ON
0 / DVD
AUDIO
CLEAR
1/2/3/4/5
6/7/8/9/0
□ / VCR
DISPLAY
PROG.-
PROG.+
DOWN
UP
LEFT
RIGHT
SLOW / STEP

SEARCH
REC. SPEED
EJECT
PAUSE
STOP
REC. / OTR.
REW
PLAY
FWD

DVD, AUDIO, MUTE, MENU / LIST, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0REPEAT, DISPLAY, ZOOM, SETARRIBA, TOP MENU, CM SKIP, VOL+, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SET, SLEEP, SYSTEM, TV/DTV, DUBBING, INFO, TIMER PROG, EPG, REC SPEED, FAV, OPEN / CLOSE, PAUSE, STOP, REC / OTR, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, VCR, STANDBY, POWER, / DVD, 0 / VCR, PROG, PROG+, SLOW / STEP, SEARCH, EJECT, .