

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



ON
MUTING
SETUP
RETURN / EXIT
1/2/3/4/5
6/7/8/9/0
ZONE 2
+10
DISPLAY
STEREO
SURR.
TEST TONE
VOL+
VOL -
CH/DISC +
CH/DISC -
UP
DOWN
LEFT
RIGHT
ENTER
REPEAT
SLEEP
MULTI CH.
DIMMER

MEMORY
ALL ST.
OPEN / CLOSE
PAUSE
STOP
REW
PLAY
FWD
STANDBY
PURE A.
V. 1/2/3/4
CD
DIRECT
DVD
TAPE
TUNER
TV
CH. SEL.
LEVEL -
LEVEL+
DSP PREV.
DSP NEXT
L. NIGHT

POWER, MUTING, MUTE, SETARRIBA, MENU, RETURN / EXIT, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0ZONE 2, / AV, DISPLAY, STEREO, SURR, TEST TONE, VOL+, VOL, CH/DISC, CH/DISC, ABAJO, IZQUIERDA, DERECHA, ENTER, REPEAT, BACK, SLEEP, MULTI CH, TV/DTV, DIMMER, INFO, MEMORY, EPG, ALL ST, FAV, OPEN / CLOSE, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, STANDBY, PURE A, V 1/2/3/4, 1/2/3/4, DIRECT, DVD, TAPE, TUNER, 0CH SEL, LEVEL, LEVEL+, VOL+, DSP PREV, DSP NEXT, NIGHT, .