

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
AUDIO
FUNCTION MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
DRIVE SELECT
DISPLAY
PROG. / CHECK
CHAPTER
STTL
SKIP/INDEX NEXT
SKIP/INDEX PREV.
UP
DOWN
LEFT / STEP BACK
RIGHT / STEP FWD
OK
RETURN
TIME SLIP / JET REW
DIRECT TV REC
i / STATUS
GUIDE
PAUSE

STOP
REC
SLOW/SEARCH REW
PLAY
SLOW/SEARCH FF.
DIRECT NAVIGATOR
* / DELETE / RESET
EXT LINK
OPTION
TR./V-LO./PG./CH DN.
TRA./V-LO./PG./CH UP
REC MODE
RED
GREEN
YELL. / MAN. SK. - -10s
BLU. / MAN. SK. - +60s
T
POWER
AV
CH-
CH+
VOL-
VOL+

POWER, AUDIO, MUTE, FUNCTION MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, / AV, DRIVE SELECT, DISPLAY, PROG / CHECK, CHAPTER, / STTL, SKIP/INDEX NEXT, SKIP/INDEX PREV, ABAJO, IZQUIERDA / STEP BACK, IZQUIERDA, DERECHA / STEP FWD, DERECHA, RETURN, BACK, TIME SLIP / JET REW, SLEEP, DIRECT, TV REC, TV/DTV, i / STATUS, INFO, GUIDE, EPG, PAUSE, STOP, REC, ROJO, SLOW/SEARCH, REW, VERDE, PLAY, AMARILLO, SLOW/SEARCH FF, AZUL, DIRECT NAVIGATOR, / DELETE / RESET, EXT LINK, OPTION, TR/V, LO/PG/CH DN, TRA/V, LO/PG/CH ARRIBA, REC MODE, FAV, YELL / MAN, 10s, BLU / MAN SK, +60s, CH+, VOL, VOL+, .