


FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
 / MENU
EXIT
1/2/3/4/5
6/7/8/9/0
EQ.
MO. / ST.
DSP.
ZOOM
ANGLE
SUBTITLE
VOL+
VOL-
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
 / ENTER
 / RETURN
SLEEP
DNSE
i / INFO

TUNER MEMORY
P. SOUND
EJECT
PAUSE
STOP
REW
PLAY
FWD
AUDIO
AUX 1
AUX 2
D. IN
DVD
TUNER
USB
TREB. / BASS
TUNING DOWN
TUNING UP
DIMMER
CD RIPPING
REMAIN

POWER, MUTE, / MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0EQ, MO / ST, DSP, ZOOM, ANGLE, SUBTITLE, VOL+, VOL-, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, / ENTER, / RETURN, BACK, SLEEP, DNSE, TV/DTV, i / INFO, INFO, TUNER MEMORY, EPG, P SOUND, FAV, EJECT, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, AUX 1, AUX 2, D IN, DVD, TUNER, USB, TREB / BASS, TUNING ABAJO, TUNING, DIMMER, CD RIPPING, REMAIN, .