

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
□ / MENU
EXIT
1 / RDS DISPLAY
2
3 / TA
4 / PTY-
5 / PTY SEARCH
6 / PTY+
7/8/9/0
DEMO
MO. / ST.
DSP. / EQ.
ZOOM
ANGLE
SUBTITLE
VOL -/+
SKIP PREV./NEXT
UP
DOWN
LEFT
RIGHT
← / ENTER
↻ / RETURN

SLEEP
CD RIPPING
i / INFO
TUNER MEMORY
P. SOUND
EJECT
PAUSE
STOP
REW
PLAY
FWD
TIMER – ON/OFF
AUDIO
∅ / CANCEL
AUX / DVD
TUNER / USB
TREB. / BASS
TUNING DOWN/UP
REPEAT A-B
REPEAT
TIMER / CLOCK
DIMMER
REMAIN
SLOW
STEP

POWER, MUTE, / MENU, MENU, EXIT, 1 / RDS DISPLAY, 3 / TA, 4 / PTY, 5 / PTY SEARCH, 6 / PTY+, 7/8/9/, 07/8/9/, 0DEMO, MO / ST, DSP / EQ, ZOOM, ANGLE, SUBTITLE, VOL, SKIP PREV, /NEXT, ABAJO, IZQUIERDA, DERECHA, / ENTER, / RETURN, BACK, SLEEP, CD RIPPING, TV/DTV, i / INFO, INFO, TUNER MEMORY, EPG, P SOUND, FAV, EJECT, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, TIMER, ON/OFF, AUDIO, / CANCEL, AUX, / DVD, 1/2, TUNER / USB, 3/4, TREB / BASS, TUNING ABAJO/ARRIBA, REPEAT A, REPEAT, TIMER / CLOCK, DIMMER, REMAIN, SLOW, STEP, .