

## **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.  
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.  
Revise que localiza todas las funciones que necesita antes de realizar la compra.

POWER
/ AUDIO
DISC MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
DVD
SEARCH
DISPLAY
ZOOM
SETUP
/ SUBTITLE
A - B
REPEAT
UP
DOWN
LEFT
RIGHT
OK / SELECT / ENTER
/ RETURN
RANDOM
ANGLE
TITLE
PROGRAM
MARKER

OPEN / CLOSE
PAUSE / STEP
STOP
REW / SKIP BACKW.
PLAY
FWD / SKIP FORWARD
VCR
POWER
/ AUDIO
CLEAR
1/2/3/4/5
6/7/8/9/0
AV
VHS
SEARCH
CM SKIP
UP
DOWN
LEFT
RIGHT
OK / SELECT / ENTER
ez REPEAT
CLK. / CNT.
TV / VCR

i
LP
C. LOCK
EJECT
PAUSE / STEP
STOP
REC. / ITR.
REW / SKIP BACKW.
PLAY
FWD / SKIP FORWARD

POWER, / AUDIO, MUTE, DISC MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DVD, SEARCH, DISPLAY, ZOOM, SETARRIBA, / SUBTITLE, REPEAT, ABAJO, IZQUIERDA, DERECHA, OK / SELECT / ENTER, / RETURN, BACK, RANDOM, SLEEP, ANGLE, TV/DTV, TITLE, INFO, PROGRAM, EPG, MARKER, FAV, OPEN / CLOSE, PAUSE / STEP, STOP, REW, / SKIP BACKW, VERDE, PLAY, AMARILLO, FWD / SKIP FORWARD, AZUL, VCR, 1/2/3/4/5, 0 6/7/8/9/, 0AV, VHS, CM SKIP, CLK / CNT, TV / VCR, TV/DTV, C LOCK, EJECT, REC / ITR, ROJO, .