


 









FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.

POWER
MUTE
 / TV.MENU
 / EXIT / CANCEL
1/2/3/4/5
6/7/8/9/0
DVD
-/--
 / DISPLAY
 / PROGR. / MENU
 / MIX / A-B
 / TTX
VOL+
VOL -
PROG.+
PROG. -
UP
DOWN
LEFT
RIGHT
ENTER
PRE.
 / SLEEP
TV / DTV
 / INDEX / REPEAT

 / PG+ / ZOOM / EPG
 / P. STD.
 / P. SIZE
 / STILL
RED
GREEN
YELLOW
BLUE
 / S. STD.
 / STORE / CLEAR / ?
PIP – ON/OFF
 / PIP – SWAP
PIP – SOUND
PIP – SOURCE
M / S
 / REVEAL / GO TO
 / SIZE / SUBTITLE
 / L/F / AUDIO
SKIP/STEP NEXT
SKIP/STEP BACK
PR. PG. / ANGLE / LIST
NEX. PG. / PG- / SURR.
 / LINE
OPEN / CLOSE
STOP

REW / SLOW REW
PLAY / PAUSE
FWD / SLOW FWD

POWER, MUTE, / TVMENU, MENU, / EXIT / CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DVD, / SOURCE, / DISPLAY, / PROGR / MENU, / MIX / A, / TTX, VOL+, VOL-, PROG+, PROG, ABAJO, IZQUIERDA, DERECHA, ENTER, PRE, BACK, / SLEEP, SLEEP, TV / DTV, TV/DTV, / INDEX / REPEAT, INFO, / PG+ / ZOOM / EPG, EPG, / P STD, FAV, / P SIZE, / NET TV, / STILL, ROJO, VERDE, AMARILLO, AZUL, / S STD, / STORE / CLEAR /, PIP, ON/OFF, / PIP, SWAP, PIP, SOUND, SOURCE, SHIFT, M / S, / REVEAL, / GO TO, SIZE / SUBTITLE, / L/F / AUDIO, SKIP/STEP, NEXT, SKIP/STEP, PR PG / ANGLE / LIST, NEX PG / PG, / SURR, / LINE, OPEN / CLOSE, STOP, REW / SLOW REW, PLAY / PAUSE, FWD / SLOW FWD, .