

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.  
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.  
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>POWER</b>
<b>MUTE</b>
<b>MENU</b>
<b>EXIT</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>SOURCE</b>
<b>DVD MENU</b>
<b>REPEAT</b>
<b>ASPECT</b>
<b>PICTURE MODE</b>
<b>TEXT</b>
<b>VOL+</b>
<b>VOL-</b>
<b>P+</b>
<b>P-</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>OK</b>
<b>BACK</b>
<b>SLEEP</b>
<b>USB/SD</b>
<b>INFO</b>

<b>PROGRAM</b>
<b>EFFECT</b>
<b>RED – TXT SUBP</b>
<b>GREEN – TXT REVEAL</b>
<b>YELLOW – TXT HOLD</b>
<b>BLUE – TXT INDEX</b>
<b>NICAM</b>
<b>TXT MIX</b>
<b>REPEAT A-B</b>
<b>TXT SIZE</b>
<b>ZOOM</b>
<b>TXT CANC</b>
<b>SUBTITLE</b>
<b>STEP</b>
<b>DVD SETUP</b>
<b>TITLE</b>
<b>DVD LANGUAGE</b>
<b>SKIP NEXT/PREV CHAP</b>
<b>EJECT</b>
<b>PAUSE</b>
<b>STOP</b>
<b>REW</b>
<b>PLAY</b>
<b>FWD</b>

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, DVD MENU, REPEAT, BACK, ASPECT, PICTURE MODE, TEXT, VOL+, VOL, ABAJO, IZQUIERDA, DERECHA, SLEEP, USB/SD, TV/DTV, INFO, PROGRAM, EPG, EFFECT, FAV, ROJO, TXT SUBP, ROJO, VERDE, TXT REVEAL, VERDE, AMARILLO, TXT HOLD, AMARILLO, AZUL, TXT INDEX, AZUL, NICAM, TXT, MIX, REPEAT A, TXT SIZE, ZOOM, TXT CANC, SUBTITLE, STEP, DVD SETARRIBA, TITLE, DVD, LANGUAGE, SKIP NEXT/PREV, CHAP, P+/P-, EJECT, PAUSE, STOP, REW, PLAY, FWD, .