

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



⏻
MUTING
CLEAR
1/2/3/4/5
6/7/8/9/0
AUX
≥10
DISPLAY
DISC
PLAY MODE
S. SOUND EQ.
VOL+
VOL-
ALBUM - ←
ALBUM - →
ENTER
REPEAT
SLEEP
TUNER / BAND
TITLE / SEARCH
PROGRAM
MARKER
AUTO OFF
TAPE - PLAY/REV.
STOP

REW / SKIP PREV.
CD - PLAY/PAUSE
FWD / SKIP NEXT
SOUND
DEL.
CLOCK / TIMER
DIMMER
INTRO
RE-MASTER
⌚ - PLAY/REC

POWER, MUTING, MUTE, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AUX, / AV, DISPLAY, DISC, PLAY MODE, S SOUND EQ, VOL+, VOL-, ALBUM, IZQUIERDA, DERECHA, ENTER, REPEAT, BACK, SLEEP, TUNER / BAND, TV/DTV, TITLE / SEARCH, INFO, PROGRAM, EPG, MARKER, FAV, AUTO OFF, TAPE, PLAY/REV, STOP, REW /, SKIP PREV, VERDE, PLAY/PAUSE, AMARILLO, FWD / SKIP NEXT, AZUL, SOUND, DEL, CLOCK / TIMER, DIMMER, INTRO, MASTER, PLAY/REC, .