

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY
AUDIO
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
HDD/DVD
EDIT
DISPLAY
ZOOM
FUNCTION
SUBTITLE
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
SELECT
RETURN
TIMER
TV/DVD
TITLE
INSERT CHP.
PLAY MODE

OPEN / CLOSE
STOP
RECORD / DUB.
SEARCH REW
PLAY / PAUSE
SEARCH FWD
VIDEO SOURCE
ANGLE
SETUP
PROGRAM+
PROGRAM -
PLAYLIST+
PLAYLIST -
REPEAT
A - B
WATCH TV
SEARCH
REC. MODE

STANDBY, POWER, AUDIO, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0HDD/DVD, SOURCE, EDIT, DISPLAY, ZOOM, FUNCTION, SUBTITLE, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, SELECT, RETURN, BACK, TIMER, SLEEP, TV/DVD, TV/DTV, TITLE, INFO, INSERT CHP, EPG, PLAY MODE, FAV, OPEN / CLOSE, / NET TV, STOP, / SMART, RECORD / DUB, ROJO, SEARCH REW, VERDE, PLAY / PAUSE, AMARILLO, SEARCH FWD, AZUL, VIDEO SOURCE, SHIFT, ANGLE, SETARRIBA, PROGRAM+, PROGRAM, PLAYLIST+, +ARRIBA, PLAYLIST, +ABAJO, REPEAT, WATCH, TV/DTV, SEARCH, REC, MODE, .