

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
□ / MENU
EXIT
1 / RDS DISPLAY
2
3 / TA
4 / PTY-
5 / PTY SEARCH
6 / PTY+
7/8/9/0
SFE. MODE
SLOW / MO./ST.
DSP.
ZOOM
PIP
SUBTITLE
VOL -/+
SKIP PREV./NEXT
DOWN / UP
← / ENTER
↻ / RETURN
SLEEP
DOLBY PL. II – MODE

i / INFO
TUNER MEMORY
DOLBY PL. II – EFFECT
EJECT
PAUSE
STOP
REW
PLAY
FWD
AUDIO
DISC MENU
AUX
BD
TUNER
TUNING/CH -
TUNING/CH +
REPEAT
REPEAT A-B
DIMMER
POPUP ME. / TITLE M.
STEP
RED / A
GREEN / B
YELLOW / C
BLUE / D

POWER, MUTE, / MENU, MENU, EXIT, 1 / RDS DISPLAY, 3 / TA, 4 / PTY+, 5 / PTY SEARCH, 6 / PTY+, 7/8/9/, 07/8/9/, 0SFE MODE, SLOW / MO/ST, DSP, ZOOM, PIP, SUBTITLE, VOL, SKIP PREV/NEXT, ABAJO / ARRIBA, IZQUIERDA / DERECHA, / ENTER, / RETURN, BACK, SLEEP, DOLBY PL II, MODE, TV/DTV, / INFO, INFO, TUNER, MEMORY, EPG, EFFECT, FAV, EJECT, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, DISC MENU, AUX, TUNING/CH, TUNING/CH +, SHIFT, + P+, REPEAT, REPEAT A, DIMMER, POPARRIBA, / TITLE M, STEP, ROJO / A, ROJO, VERDE / B, AMARILLO / C, AZUL / D, .