


# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.

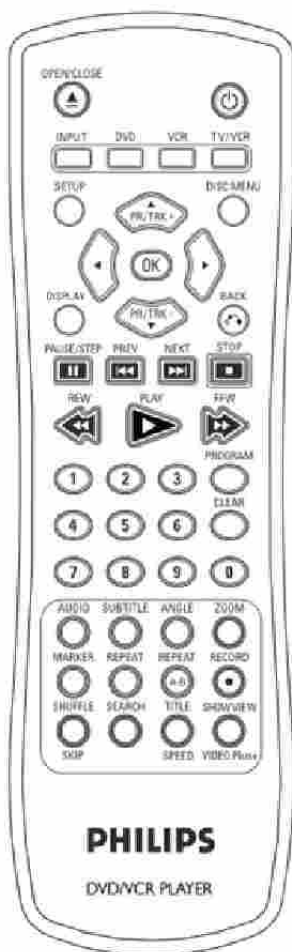

<b>POWER</b>
<b>AUDIO</b>
<b>MENU</b>
<b>EXIT</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>INPUT</b>
<b>VCR</b>
<b>SEARCH</b>
<b>ZOOM</b>
<b>SETUP MENU</b>
<b>SUBTITLE</b>
<b>REPEAT</b>
<b>REPEAT A-B</b>
<b>SKIP NEXT CHAP</b>
<b>SKIP PREV CHAP</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>OK</b>
<b>SPEED</b>
<b>DVD</b>
<b>INFO</b>
<b>TITLE MENU</b>

<b>BOOKMARK</b>
<b>EJECT</b>
<b>PAUSE</b>
<b>STOP</b>
<b>ANGLE</b>
<b>REW</b>
<b>PLAY</b>
<b>FWD</b>
<b>CLEAR</b>
<b>VCR1/2/3/4/5</b>
<b>VCR 6/7/8/9/0</b>
<b>VCR PLAY</b>
<b>VCR PAUSE</b>
<b>VCR STOP</b>
<b>VCR REC</b>
<b>VCR REW</b>
<b>VCR FWD</b>
<b>PR/TRK+</b>
<b>PR/TRK-</b>
<b>SHUFFLE</b>
<b>VCR UP</b>
<b>VCR DOWN</b>
<b>VCR OK</b>
<b>VCR LEFT</b>
<b>VCR RIGHT</b>

POWER, AUDIO, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT, VCR, SEARCH, ZOOM, SETARRIBA MENU, SUBTITLE, REPEAT, BACK, REPEAT A, SKIP NEXT CHAP, SKIP PREV CHAP, ABAJO, IZQUIERDA, DERECHA, SPEED, SLEEP, DVD, TV/DTV, INFO, TITLE MENU, EPG, BOOKMARK, FAV, EJECT, PAUSE, STOP, ANGLE, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, CLEAR, VCR1/2/3/4/5, VCR 6/7/8/9/, 0VCR PLAY, AMARILLO, VCR PAUSE, VCR STOP, VCR REC, VCR REW, VCR FWD, PR/TRK+, PR/TRK-, SHUFFLE, VCR ARRIBA, VCR ABAJO, VCR OK, VCR IZQUIERDA, .