

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



🔌 - RECEIVER
MUTE
🏠 / SETUP
X / AUDIO PARAMETER
1/2/3/4/5
6/7/8/9/0
INPUT SELECT - ←
INPUT SELECT - →
DISP.
S. RETRIEVER
TUNER EDIT
BAND
MASTER VOLUME+
MASTER VOLUME -
PRESET NEXT
PRESET PREV
UP
DOWN
LEFT
RIGHT
ENTER
↶ / RETURN
SLEEP
SPEAKERS
DIMMER

SB. CH.
PHASE
AUTO / DIRECT
STEREO / A.L.C.
STANDARD
AUTO / DIRECT
BD
CD
CD-R
DVD
DVR
MULTI IN
PORTABLE
TUNER
SIGNAL SEL.
CH SELECT
CH LEV+
CH LEV -
TUNE+/-
BASS+
BASS -
TRE. -
TRE. +
2nd ENTER
MIDNIGHT

RECEIVER, POWER, MUTE, / SETARRIBA, MENU, X / AUDIO PARAMETER, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT, SELECT, / SOURCE, INPUT, DISP, S RETRIEVER, TUNER EDIT, BAND, MASTER VOLUME+, VOL+, MASTER VOLUME, VOL, PRESET NEXT, PRESET PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, SPEAKERS, TV/DTV, DIMMER, INFO, SB CH, EPG, PHASE, FAV, AUTO / DIRECT, ROJO, STEREO / ALC, VERDE, STANDARD, AMARILLO, AZUL, DVD, DVR, MULTI IN, PORTABLE, TUNER, SIGNAL SEL, CH SELECT, CH LEV+, VOL+, CH LEV, VOL, TUNE+/, P+/, BASS+, BASS, TRE, TRE +, MIDNIGHT, .