

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
AUDIO
HOME
CLEAR
1/2/3/4/5
6/7/8/9/0
NETFLIX
+10
PICTURE ADJUST
ANGLE
OPTION
SUBTITLE
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
YOUTUBE
INFO
PROG. / DIRECT
RANDOM
OPEN / CLOSE

PAUSE
STOP
REW
PLAY
FWD
POP-UP MENU
TOP MENU
SEARCH
VIDEO RESOLUTION
CALL
SETUP
DVD A PAGE
REPEAT
A-B
DIMMER
DISC LAYER
PURE
RED
GREEN
YELLOW
BLUE

POWER, AUDIO, MUTE, HOME, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0NETFLIX, PICTURE ADJUST, ANGLE, OPTION, SUBTITLE, SKIP, NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, YOUTUBE, TV/DTV, INFO, PROG / DIRECT, EPG, RANDOM, FAV, OPEN / CLOSE, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, POP, ARRIBA MENU, TOP MENU, SEARCH, VIDEO RESOLUTION, CALL, SETARRIBA, DVD A PAGE, REPEAT, SLEEP, DIMMER, DISC LAYER, PURE, ROJO, .