

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
DISP. / INPUT
SEARCH
RDS
ZOOM
SET UP
 / SUBTITLE
VOLUME+
VOLUME -
SKIP NEXT+
SKIP PREV -
UP / PRESET/CH+
DOWN / PRESET/CH -
LEFT / TUN -
RIGHT / TUN+
ENTER
 / RETURN
SLEEP
PROG. / MEMO.
DIMMER

XTS
MARKER
OPEN / CLOSE
PAUSE / STEP
STOP
REW / SCAN -
PLAY
FWD / SCAN+
AUDIO
BAND
DVD
AUX
USB
SLOW+
SLOW -
REPEAT
REPEAT A – B
TITLE
XTS PRO.
SOUND

POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DISP / INPUT, SOURCE, SEARCH, RDS, ZOOM, SET ARRIBA, / SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP, NEXT+, PREV, ARRIBA / PRESET/, CH+, ABAJO / PRESET/CH, ABAJO, IZQUIERDA /, TUN, IZQUIERDA, DERECHA /, TUN+, DERECHA, ENTER, / RETURN, BACK, SLEEP, PROG / MEMO, TV/DTV, DIMMER, INFO, XTS, EPG, MARKER, FAV, OPEN / CLOSE, / NET TV, PAUSE / STEP, STOP, / SMART, REW /, SCAN, VERDE, PLAY, AMARILLO, FWD / SCAN+, AZUL, AUDIO, BAND, DVD, AUX, USB, SLOW+, SLOW, REPEAT, REPEAT, TITLE, XTS PRO, SOUND, .