

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
AUDIO
MENU
CANCEL
1/2/3/4/5
6/7/8/9/0
FUNCTIONS
≥10
QUICK OSD
ZOOM
SETUP
SUBTITLE
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
TRANSFER MODE
ADVANCED SURROUND
DIALOGUE ENHANCER
DNR
OPEN / CLOSE

PAUSE
STOP
SLOW/SEARCH REW
PLAY
SLOW/SEARCH FWD
TOP MENU
PICTURE MODE
ANGLE / PAGE
QUICK REPLAY
MANUAL SKIP
FL SELECT
REPEAT
PLAY MODE
PLAY SPEED

POWER, AUDIO, MUTE, MENU, CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FUNCTIONS, / SOURCE, QUICK OSD, ZOOM, SETARRIBA, SUBTITLE, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, TRANSFER MODE, TV/DTV, ADVANCED SURROUND, INFO, DIALOGUE ENHANCER, EPG, DNR, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, SLOW/SEARCH, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, TOP MENU, PICTURE MODE, ANGLE / PAGE, QUICK REPLAY, MANUAL SKIP, FL SELECT, REPEAT, PLAY MODE, PLAY SPEED, SHIFT, +AZUL, .