

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
[Menu Icon] / MENU
EXIT
1/2/3/4/5
6/7/8/9/0
[Source Icon] / SOURCE
LIST
[Info Icon] / P. MODE
[Info Icon] / P. SIZE
SUBTITLE
TEXT / GO TO
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
OK
[Repeat Icon] / REPEAT
SLEEP
DTV / RADIO
INFO

[Guide Icon] / GUIDE
FAV. CH.
TS
RED
GREEN
YELLOW
BLUE
AUDIO / I/II
[S Mode Icon] / S. MODE
SKIP NEXT
SKIP PREV
STOP
REC
REW
PLAY / PAUSE
FWD

POWER, MUTE, / MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 0/7/8/9/, 0 / SOURCE, / SOURCE, LIST, / P MODE, / P SIZE, SUBTITLE, TEXT / GO TO, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, / REPEAT, BACK, SLEEP, DTV / RADIO, TV/DTV, INFO, / GUIDE, EPG, FAV CH, FAV, ROJO, VERDE, AMARILLO, AZUL, AUDIO / I/II, / S MODE, SKIP NEXT, SKIP, PREV, STOP, REC, REW, PLAY / PAUSE, FWD, .