

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



SYSTEM MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
/
/
/ DISPLAY
SCENE SEARCH
SOUND MODE
HOME
VOL+
VOL-
UP
DOWN
LEFT
RIGHT
OK
RETURN
SLEEP
TV
DISPLAY / i+ / ?
•➡ / ADVANCE
TOP MENU

NIGHT
RED
GREEN
YELLOW
BLUE
/ DIGITAL
POP UP MENU
ONE TOUCH PLAY
DYNAMIC BASS
/ D. TUNING / ANALOG
SKIP NEXT / PRESET+
SKIP PREV. / PRESET-
/ REPLAY
TIME / -/--
OPTION / TOOLS
PAUSE
STOP
REW / TUNING-
PLAY
FWD / TUNING+

POWER, MUTE, SYSTEM, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 0 / , / DISPLAY, SCENE SEARCH, SOUND MODE, HOME, VOL+, VOL, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, SLEEP, TV/DTV, DISPLAY / i+ / , INFO, / ADVANCE, EPG, TOP MENU, FAV, NIGHT, ROJO, VERDE, AMARILLO, AZUL, / DIGITAL, POP ARRIBA MENU, ONE TOUCH PLAY, DYNAMIC BASS, / D TUNING / ANALOG, SKIP NEXT / PRESET+, SKIP PREV / PRESET-, / REPLAY, TIME / , OPTION / TOOLS, PAUSE, STOP, REW / TUNING, PLAY, FWD / TUNING+, .