

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY / ON
MUTE
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
SOUND
SOUND RETREIVER
DISPLAY
MCACC
SURROUND
T. EDIT
VOL+
VOL-
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER
iPod CTRL
↻ / iPod
↺ / iPod
CLASS

ANGLE
TOP MENU
ADV. SURROUND
PAUSE
STOP
REW
PLAY
FWD
AUDIO
HOME MENU
FM/AM / TUNER
DVD / CD
HDMI 1/2
iPod
LINE
TV
USB
PLAY LIST 1
PLAY LIST 2
PLAY LIST 3
ZOOM
SETUP
SUBTITLE

STANDBY / ON, POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOUND, SOUND RETREIVER, DISPLAY, MCACC, SURROUND, T EDIT, VOL+, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, iPod CTRL, BACK, / iPod, SLEEP, TV/DTV, CLASS, INFO, ANGLE, EPG, TOP MENU, FAV, ADV SURROUND, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, HOME MENU, FM/AM / TUNER, DVD / CD, HDMI 1, SHIFT, iPod, LINE, USB, PLAY LIST 1, PLAY LIST 2, PLAY LIST 3, 0ZOOM, SETARRIBA, SUBTITLE, .