

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
VIRTUAL
SEARCH
DISPLAY
ZOOM
SETUP
[] / SUBTITLE
VOLUME+
VOLUME -
SKIP+
SKIP -
UP
DOWN
LEFT
RIGHT
ENTER
[] / RETURN
SLEEP
*
TITLE

PROG. MEMO
MARKER
OPEN / CLOSE
PAUSE / STEP
STOP
REW / SCAN -
PLAY
FWD / SCAN+
[] / AUDIO
DVD
USB
AUX
BAND
SOUND
REPEAT
REPEAT A – B
PTY
XTS
DIMMER
RDS

POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0VIRTUAL, / SOURCE, SEARCH, DISPLAY, ZOOM, SETARRIBA, / SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP+, SKIP, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, TV/DTV, TITLE, INFO, PROG MEMO, EPG, MARKER, FAV, OPEN / CLOSE, / NET TV, PAUSE / STEP, STOP, / SMART, REW, / SCAN, VERDE, PLAY, AMARILLO, FWD / SCAN+, AZUL, / AUDIO, DVD, USB, AUX, BAND, SOUND, REPEAT, REPEAT A, PTY, XTS, DIMMER, RDS, .