

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
SET MENU/SRCH. MODE
STANDBY
1 / STEREO
2 / MUSIC
3 / ENTERTAINMENT
4 / MOVIE
5 / STANDARD
6 / SELECT
7 / EXTENDED
8 / PURE DIRECT
9 / SPEAKERS
0 / ENHANCER
+10 / NIGHT
DISPLAY / ON SCREEN
LEVEL
VOLUME+
VOLUME -
TV CH. +
TV CH. -
UP
DOWN
LEFT
RIGHT

ENTER
RETURN / XM MEMORY
SLEEP
BAND
STRAIGHT/ENT./EFFECT
CD
CD-R / MD
DTV / CBL
DVD
DVR
MULTI CH. IN.
PHONO
TUNER
V-AUX
VCR
A-E / CAT.-
A-E / CAT.+

POWER, MUTE, SET MENU/SRCH MODE, MENU, STANDBY, EXIT, 1 / STEREO, 2 / MUSIC, 3 / ENTERTAINMENT, 4 / MOVIE, 5 / STANDARD, 6 / SELECT, 7 / EXTENDED, 8 / PURE DIRECT, 9 / SPEAKERS, 0 / ENHANCER, 0+10 / NIGHT, DISPLAY / ON SCREEN, LEVEL, VOLUME+, VOL+, VOLUME, VOL, TV CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN / XM MEMORY, BACK, SLEEP, BAND, EPG, STRAIGHT/ENT/EFFECT, FAV, R / MD, DTV / CBL, DVD, DVR, MULTI CH IN, PHONO, TUNER, AUX, VCR, E / CAT, E / CAT+, .