

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



– RECEIVER
MUTE
/ HOME MENU
1/2/3/4/5
6/7/8/9/0
INPUT SELECT – ←
INPUT SELECT – →
VIDEO PARAMETER
X / AUDIO PARAMETER
D. ACCESS
CH. LEVEL
VOLUME -/+
PRESET -/+
UP
DOWN
LEFT
RIGHT
ENTER
/ RETURN
SLEEP
BAND
i / STATUS
PTY.
+ FAVORITE
L. MO. – AU./ALC/DIR.

LIS. MODE – STAND.
LIS. MODE – ADV. SUR.
FEATURES – PHASE
FEATURES – PQLS.
FEAT. – AUTO S. RTRV.
FEATURES – MC. ACC.
AUDIO
/ TOOLS MENU
BD
CD
DVD
DVR / BDR
HDMI
iPod / USB
NET.
SAT / CBL.
TUNER
TV
CLASS
TUNE -/+
2 <sup>nd</sup> ENTER
SIGNAL SEL.
DIMMER
MPX
SPEAKERS

RECEIVER, POWER, MUTE, / HOME MENU, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, / AV, INPUT SELECT, VIDEO PARAMETER, X / AUDIO PARAMETER, D ACCESS, CH LEVEL, VOLUME, VOL, PRESET, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, BAND, TV/DTV, i / STATUS, INFO, PTY, EPG, + FAVORITE, FAV, L MO, AU/ALC/DIR, LIS MODE, STAND, ADV SUR, FEATURES, PHASE, ROJO, PQLS, VERDE, FEAT, AUTO S RTRV, AMARILLO, FEATURES, MC ACC, AZUL, AUDIO, / TOOLS, DVD, DVR / BDR, HDMI, iPod / USB, NET, SAT / CBL, TUNER, 0CLASS, TUNE, SIGNAL SEL, TV/DTV, DIMMER, MPX, SPEAKERS, .