

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTING
MENU / PL / SETTINGS
CANCEL
1/2/3/4/5
6/7/8/9/0
10
> = 10
FL DISPLAY
SCAN MODE / VFP
SURROUND
SUBTITLE
TV VOL+ / AUDIO VOL+
TV VOL- / AUDIO VOL-
SKIP NEXT / TUNING+
SKIP PREV. / TUNING-
UP
DOWN
LEFT
RIGHT
ENTER
↶ / RETURN
SLEEP
PLAY MODE
DIMMER

ANGLE
TOP MENU / PG / SETUP
ON SCREEN
PAUSE / FM MODE
STOP / MEMORY
REW / SLOW-
PLAY / DVD
FWD / SLOW+
AUDIO
FM / AM
TV
USB
SPK. LEVEL+
SPK. LEVEL-
SPK. LEVEL
REPEAT
TITLE / GROUP

POWER, MUTING, MUTE, MENU / PL / SETTINGS, MENU, CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0 / AV, FL DISPLAY, SCAN MODE / VFP, SURROUND, SUBTITLE, TV VOL+ / AUDIO VOL+, VOL+, TV VOL, / AUDIO VOL, VOL, SKIP NEXT / TUNING+, SKIP PREV / TUNING, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, PLAY MODE, TV/DTV, DIMMER, INFO, ANGLE, EPG, TOP MENU / PG / SETARRIBA, FAV, ON SCREEN, PAUSE / FM MODE, STOP / MEMORY, REW / SLOW, VERDE, PLAY / DVD, AMARILLO, FWD / SLOW+, AZUL, AUDIO, FM / AM, USB, SPK LEVEL+, VOL+, SPK LEVEL, VOL, REPEAT, TITLE / GROARRIBA, .