

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY / ON
MUTE
DVD MENU
CLR
1/2/3/4/5
6/7/8/9/0
DVD DISP.
CH. LEVEL
SURROUND
ROOM SYSTEM
SOUND
/ TIMER / CLOCK ADJ.
VOL+ / VOL-
TUNE+
TUNE-
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
ADVANCED
RANDON
DIMMER
ANGLE

PROGRAM
TRAY OPEN / CLOSE
PAUSE
STOP
REW
PLAY
FWD
AUDIO
SYS. MENU
CD / DVD
TUNER / FM/AM
TV
VIDEO V1 / V2 / V3
TEST TONE
SYS. DISP.
SETUP SYSTEM
SUBTITLE
FOLDER +/-
SKIP NEXT / PREV.
ST +/-
REPEAT
AUTO
LANGUAGE
TOP MENU
DOOR OPEN / CLOSE

STANDBY / ON, POWER, MUTE, DVD MENU, MENU, CLR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DVD DISP, / AV, CH LEVEL, SURROUND, ROOM SYSTEM, SOUND, / TIMER / CLOCK ADJ, VOL+ / VOL, TUNE+, TUNE, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, ADVANCED, SLEEP, RANDON, TV/DTV, DIMMER, INFO, ANGLE, EPG, PROGRAM, FAV, TRAY OPEN / CLOSE, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, SYS MENU, CD / DVD, TUNER / FM/AM, VIDEO V1 / V2 / V3, TEST TONE, SYS DISP, SETARRIBA SYSTEM, SUBTITLE, FOLDER +/, VOL+ / VOL, SKIP NEXT / PREV, P+ / P, ST +/, ARRIBA / ABAJO, REPEAT, SHIFT, +BACK, AUTO, +TV/DTV, LANGUAGE, +INFO, TOP MENU, +FAV, DOOR OPEN / CLOSE, .