

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
HOME / HOME
CLEAR
1/2/3/4/5
6/7/8/9/0
FUNCTION / FUNCTION
OPTICAL
TITLE / POPUP
SPEAKER LEVEL
SOUND EFFECT
SUBTITLE
VOL+
VOL -
TUNING+
TUNING -
UP
DOWN
LEFT
RIGHT
ENTER
BACK / BACK
SLEEP
INFO / MENU
DISC MENU

RED / RDS
GREEN / PTY
YELLOW / PTY SEARCH
BLUE / MONO/STEREO
AUDIO
PRESET+
PRESET -
SKIP NEXT
SKIP PREV
REPEAT / REPEAT
OPEN / CLOSE
PAUSE / STEP
STOP
SCAN REW
PLAY
SCAN FWD

POWER, MUTE, / HOME, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0 / FUNCTION, / SOURCE, OPTICAL, TITLE / POPARRIBA, SPEAKER LEVEL, SOUND EFFECT, SUBTITLE, VOL+, VOL, TUNING+, TUNING, ABAJO, IZQUIERDA, DERECHA, ENTER, / BACK, BACK, SLEEP, INFO / MENU, INFO, DISC MENU, FAV, ROJO / RDS, ROJO, VERDE / PTY, VERDE, AMARILLO / PTY SEARCH, AMARILLO, AZUL / MONO/STEREO, AZUL, AUDIO, PRESET+, VOL+, PRESET, VOL, SKIP NEXT, SKIP PREV, / REPEAT, OPEN / CLOSE, PAUSE / STEP, STOP, SCAN REW, PLAY, SCAN FWD, .