



FUNCIONES DEL MANDO PROGRAMADO:


En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



 / I
 / A. MONITOR
MENU
1/2/3/4/5
6/7/8/9/0
DVD
VCR
DVD PICTURE
ZOOM
SETUP MENU
SUBTITLE
TV / VCR PR +
TV / VCR PR -
UP
DOWN
LEFT
RIGHT
OK
RETURN
REC LINK
TV / VCR
TITLE
ANGLE
PROG.
PAUSE

STOP
REC
REW
PLAY
FWD

TOP MENU
3D PHONIC
+10
SETUP
SKIP NEXT
SKIP PREV
DATE+
DATE -
START / DEBUT+
START / DEBUT -
STOP / FIN -
STOP / FIN+
REPEAT

POWER, / A MONITOR, MUTE, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DVD, SOURCE, VCR, DVD PICTURE, ZOOM, SETARRIBA MENU, SUBTITLE, TV / VCR PR+, TV / VCR, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, REC LINK, SLEEP, TV / VCR, TV/DTV, TITLE, INFO, ANGLE, EPG, PROG, FAV, PAUSE, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, TOP MENU, SIFT+MENU, 3D PHONIC, 00SETARRIBA, SKIP NEXT, SKIP, PREV, SHIFT, DATE+, VOL+, DATE, VOL, START /, DEBUT+, DEBUT, STOP /, FIN, FIN+, REPEAT, SHIF+BACK, .