

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
/ AUDIO
MENU / LIST
CLEAR
1/2/3/4/5
6/7/8/9/0
AV
3D SURR.
DISPLAY
ZOOM
SETUP
/ SUBTITLE
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER
/ RETURN
TIMER REC
TV / DVD
/ HOME
ANGLE
MARKER

OPEN / CLOSE
PAUSE / STEP
STOP
REC
REW
PLAY
FWD
SEARCH
CHP ADD.
RANDOM
DUBBING
THUMBNAIL
REPEAT
A-B
REC MODE
TITLE
I SKIP
TIME SHIFT
T
TV POWER
MUTE
AV / INPUT
VOL+ / VOL-
PR./CH.+ / PR./CH.-

POWER, / AUDIO, MUTE, MENU / LIST, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AV, / AV, 3D SURR, DISPLAY, ZOOM, SETARRIBA, / SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, TIMER REC, SLEEP, TV / DVD, TV/DTV, / HOME, INFO, ANGLE, EPG, MARKER, FAV, OPEN / CLOSE, PAUSE / STEP, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, SEARCH, CHP ADD, RANDOM, DUBBING, THUMBNAIL, REPEAT, REC MODE, TITLE, I SKIP, TIME SHIFT, TV POWER, AV / INPUT, / AV, VOL+ / VOL, VOL+/, PR/CH+ / PR/CH, P+/, .