

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTING
SYSTEM MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
FUNCTION
RESOLUTION
DISPLAY
PICTURE NAVI
MOVIE / MUSIC
SUBTITLE
VOLUME+
VOLUME-
SKIP NEXT / PRESET+
SKIP PREV. / PRESET-
UP
DOWN
LEFT
RIGHT
+
/ RETURN
SLEEP
TV
DIMMER

ANGLE
DVD TOP MENU
EJECT
PAUSE
STOP
REW / TUNING-
PLAY
FWD / TUNING+
AUDIO
DVD MENU
SOUND FIELD
DIRECT TUNING
TONE
TUNER MENU
REPEAT
NIGHT
TV INPUT

POWER, MUTING, MUTE, SYSTEM MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0FUNCTION, / AV, RESOLUTION, DISPLAY, PICTURE NAVI, MOVIE / MUSIC, SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT / PRESET+, SKIP PREV / PRESET, ABAJO, IZQUIERDA, DERECHA, / RETURN, BACK, SLEEP, TV/DTV, DIMMER, INFO, ANGLE, EPG, DVD TOP MENU, FAV, EJECT, PAUSE, STOP, REW / TUNING, VERDE, PLAY, AMARILLO, FWD / TUNING+, AZUL, AUDIO, DVD MENU, SOUND FIELD, DIRECT TUNING, TONE, TUNER MENU, REPEAT, NIGHT, TV INPUT, .