

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



AUDIO
MENU
X / CANCEL
1/2/3/4/5
6/7/8/9/0
SHOWVIEW / V. PLUS+
PROG. / CHECK
DISPLAY
ON SCREEN
SETUP
SUBTITLE
TV VOL+
TV VOL -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
/ VCR TIMER
TV/VCR / TV/DVD
ANGLE / LIVE CHECK

/ DVD TIMER
TOP MENU / NAVIGATION
REC MODE
PAUSE
STOP
REC
REW
PLAY
FWD
PR+
PR -
VCR / DVD

POWER, AUDIO, MUTE, MENU, X / CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SHOWVIEW / V PLUS+, SOURCE, PROG / CHECK, DISPLAY, ON SCREEN, SETARRIBA, SUBTITLE, TV VOL+, VOL+, VOL, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, / VCR TIMER, SLEEP, TV/VCR / TV/DVD, TV/DTV, ANGLE / LIVE CHECK, INFO, / DVD TIMER, EPG, TOP MENU / NAVIGATION, FAV, REC MODE, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, PR+, DERECHA, VCR / DVD, .