


FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
CH LIST
DISPLAY
PIC. MODE
S. MODE
TEXT / STEP
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
OK

SLEEP
TV / RADIO
INDEX / PROG

SUBPAGE
TIME SHIFT / TITLE
ASPECT
HOLD
RED
GREEN
YELLOW
BLUE
TIMER / ZOOM
AUDIO
REC. LIST
REVEAL / A - B
SIZE
SUBTITLE
SKIP NEXT
SKIP PREV
PAUSE
STOP
REC
REW
PLAY
FWD

STANDBY, POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, CH LIST, DISPLAY, PIC MODE, S MODE, TEXT / STEP, VOL+, VOL-, CH+, ABAJO, IZQUIERDA, DERECHA, BACK, SLEEP, TV / RADIO, TV/DTV, INDEX / PROG, INFO, SUBPAGE, EPG, TIME, SHIFT / TITLE, FAV, ASPECT, / NET TV, HOLD, / SMART, ROJO, VERDE, AMARILLO, AZUL, TIMER / ZOOM, AUDIO, REC LIST, REVEAL / A, SIZE, SUBTITLE, SKIP NEXT, SKIP PREV, PAUSE, STOP, REC, REW, PLAY, FWD, .